



How to use 3CServer for DAEnetIP1 TFTP update

Step by step guide

1. Download 3Cserver from this [link](#)
2. Install 3CServer and run it. You should see this window

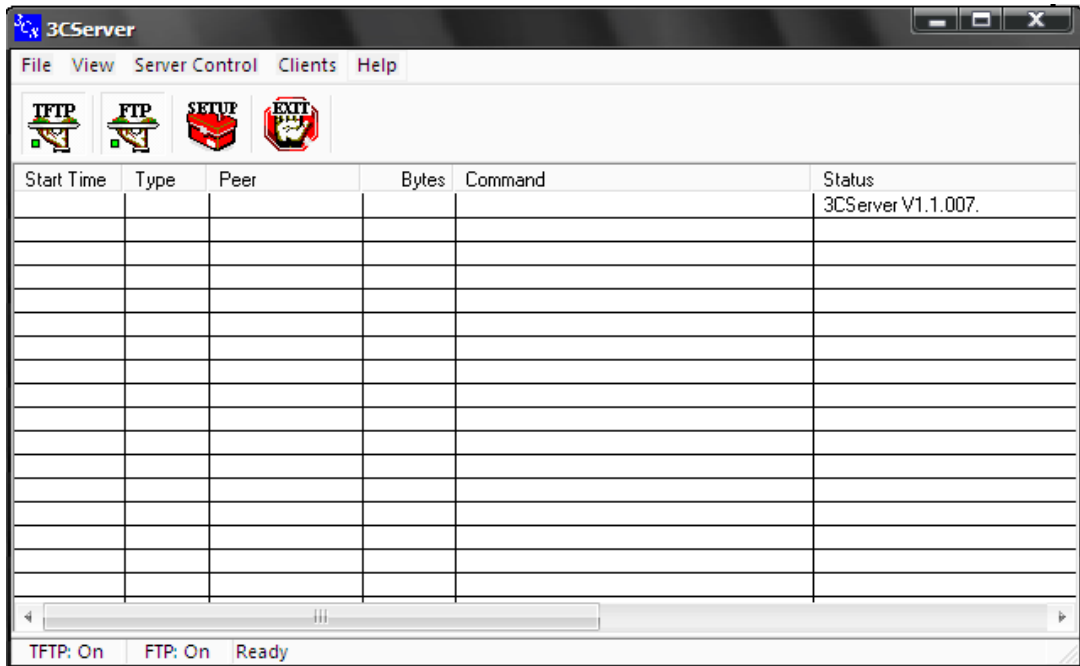

3. Open Setup -> “TFTP configuration” and select the folder of the .bin file
4. Open DAEnetIP1 manager and go to the “Update” section

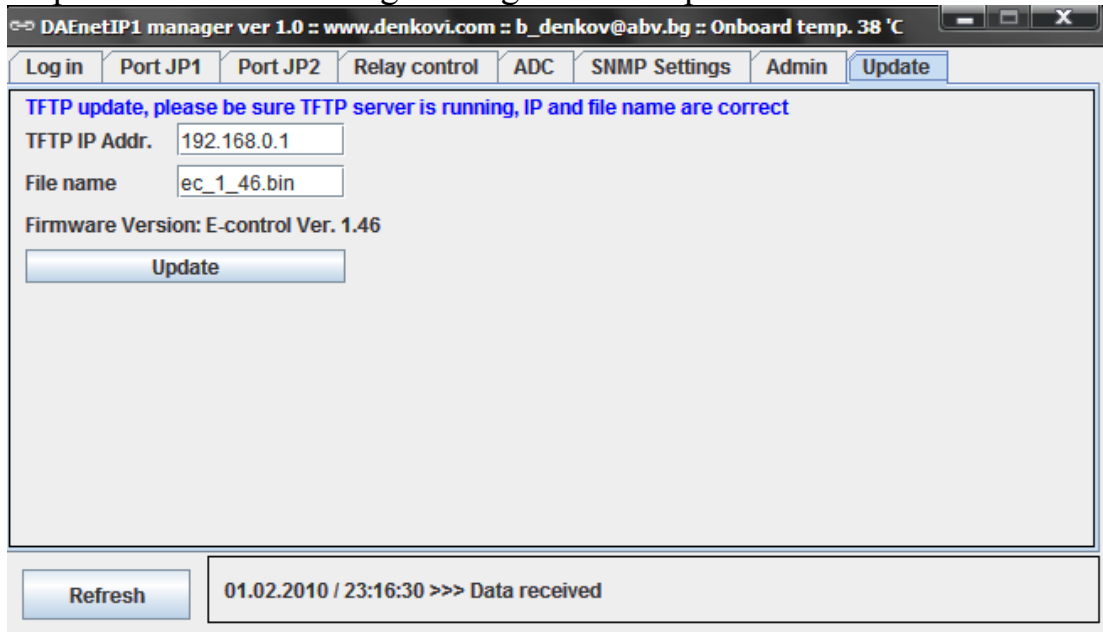

5. Enter the IP of the TFTP server and the name of the .bin file. Be sure that the fields are correct, otherwise DAEnetIP1 won't be updated.
6. Press “Update” button
7. Wait 60 seconds.
8. DAEnetIP1 software update is finished.